

HOPVISION

OFFER YOU A NEW VISION

User Manual



Model: JQ818A

A Big Thank You

We're thrilled that you have chosen to purchase the Projector At HOPVISION. We're committed to providing you with products that enhance your daily life. We also aim to give our customers excellent support. Should you have any questions or feedback about your new product, simply get in touch with our customer support team by email at.

service@hopvisiontec.com

Enjoy your new product!

How to connect and watch Netflix

All projector with mirror display doesn't support play protected video when you connect it to your smartphone directly. (Netflix, Prime video, Hulu, etc)

Because these video have an encryption protocol, the projector has no right to recognized when it is connected directly to the phone via the USB interface. Hope you understand.
(Projector without mirror display, need a to HDMI adapter if you want connect it to your smartphone)

Please follow these ways below to watch netflix:

First Solution:

You can watch Netflix via chromeacast/laptop/fire tv stick/Roku on our projector.

Second Solution:

You can connect the computer/ Smart TV to the projector through the HDMI when playing movies from Netflix.

Third Solution:

You can buy a Wireless HDMI Dongle to mirror your phone.

The reason why the fire stick or other HDMI device can play Netflix is because the HDMI interface encryption protocol includes Netflix's.

It works with youtube, chrome, safari, facetime when you connect it to a smartphone directly.


Please read through this User's manual for proper use of this product.

⚠ Note:

- ❶ Do not look directly into the lens while the projector is running, as strong light may damage your eyes.
- ❷ Do not block the air outlet to prevent the projector from cooling down because internal electronics are damaged.
- ❸ Keep the projector and accessories out of the reach of children.
- ❹ Please make sure that the working environment of the projector is dry and ventilated.
- ❺ Do not place the projector in a place that is too hot or cold which will shorten the life of the device. The recommended working environment is 5 °C ~ 35 °C.
- ❻ Do not press hard on the projector, as it may damage the product.
- ❼ Do not throw, hit, or shake the projector to avoid damaging the circuit board.
- ❽ Do not disassemble or repair the projector yourself. Please contact after-sales service if you have any questions.

2


PRODUCT OVERVIEW

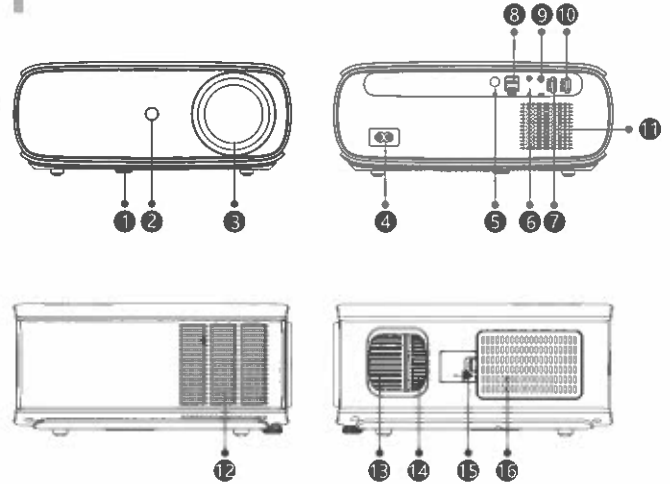


- | | |
|-------------------------------|---------------------------------|
| ❶ Level Stand Adjustment | ❹ AV Port |
| ❷ IR Receiver | ❺ HDMI 2 Port |
| ❸ Focus Lens | ❻ Speaker |
| ❹ Power Switch | ❼ Cooling Window |
| ❺ IR for Remote Control | ❽ Lens Focusing |
| ❻ 3.5mm Port for Audio Output | ❿ Keystone Correction |
| ❼ HDMI 1 Port | ⓫ Detachable Dust Screen Switch |
| ❽ USB 1 Port & USB 2 Port | ⓬ Detachable Dust Screen |

3

PRODUCT OVERVIEW

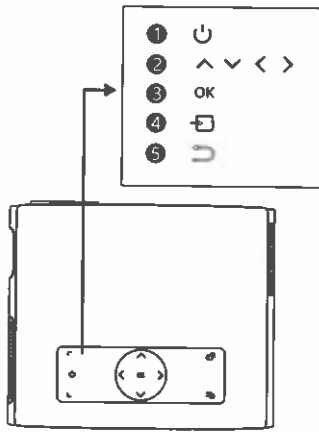


- ① Power
- ② Arrow Keys
- ③ OK
- ④ Input Source Key
- ⑤ Return

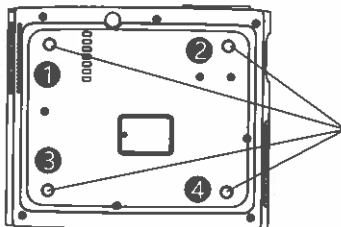

- ①-④ Ceiling Mount Hole of Projector
(can be used by removing the footpad, the ceiling mount hole size is M5)

4


REMOTE CONTROL

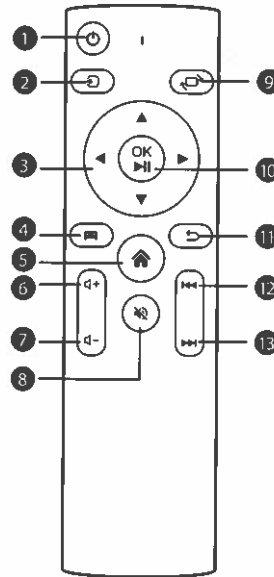

- ① Power Source
- ② Input Source Key
- ③ Move Left / Move Right / Move Up / Move Down
- ④ Menu
- ⑤ Home Page
- ⑥ Volume Up
- ⑦ Volume Down
- ⑧ Mute
- ⑨ Picture Flip
- ⑩ Confirm Key(Play and Pause)
- ⑪ Return
- ⑫ Previous
- ⑬ Next

5

PROJECTOR INSTALLATION METHOD

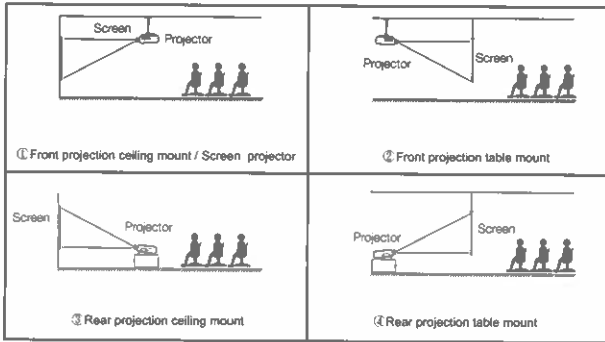


Warm Tips:

1. When using the ceiling mount method, the projector cannot be higher than the upper edge of the screen, otherwise, it will affect the image effect or keystone correction.
2. Please install the projector on the symmetrical axis of the screen to avoid trapezoidal distortion of the left and right images.
3. In order to avoid damage, the installed projector should be well ventilated, and no objects should cover or block the projector's vents.
4. Please disconnect the power during the installation process to avoid electric shock or projector circuit failure.
5. For the newly installed projector, you need to set "Image Flip" and "Image Correction" when you turn it on the first time.

6


BOOT UP

- 1: Plug the power cord into a power outlet, the projector enters standby.
- 2: Press the button "⏻" on the projector or on the remote control.

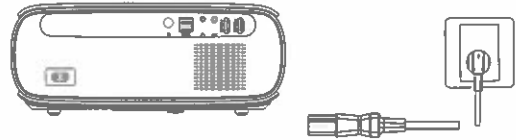

FOCUS

Let the projector be perpendicular to the wall, with the focusing button to make the picture clear. When focusing, you can broadcast programs to help you finish focus.

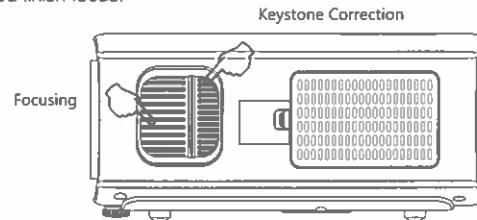

7

KEYSTONE CORRECTION


1. Vertical keystone correction

1) The vertical keystone correction is required when ① and ③ below appear during the first installation and use.



2) Dial the keystone button left and right to adjust the picture to the quadrangle as shown in ② to finish the vertical keystone correction.

2. Horizontal keystone correction

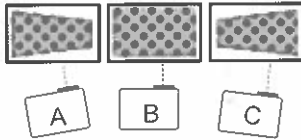



A: If the picture is big in the left and small in the right, slightly swing the project to the right to correct the picture.

B: Please refer to the picture. It is normal if the project is slightly oblique.

C: If the picture is big in the right and small in the left, slightly swing the project to the left to correct the picture.

 HOW TO SELECT THE SOURCE

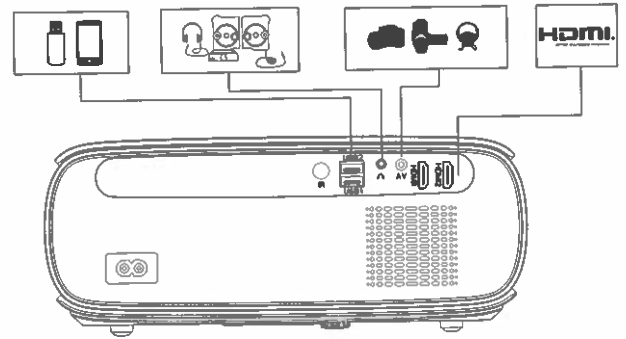

Select the signal source you want to enter the main interface, and click "Source" icon or Press the signal source key "" of the projector, such as HDMI 1/ HDMI 2/ AV, then press the "OK" key of the projector to enter the corresponding source interface.

There are also signal source key and OK key on the remote control. You can directly select the signal source you need through the remote control.

HOW TO CONNECT PHONE/ TABLET/ PC

Press "☐" to choose signal source: HDMI 1/ HDMI 2, then use the following cable to connect

- 1.a HDMI cable (included).
 - 2.a Lightning-to-HDMI adapter (for iOS), or a Micro USB/Type C to HDMI cable (for Android)
 - 3.You can buy a Wireless HDMI Dongle/ Chromecast to mirror your phone.
- P.S. This projector does not support connecting to your phone via a USB CABLE.

Add:Different brand laptop output keys are as follows:

Lenovo	Fn+F3	Fujitsu	Fn+F10
Dell	Fn+F8	Haier	Fn+F3
HP	Fn+F4	NEC	Fn+F3
ThinkPad	Fn+F7	Panasonic	Fn+F3
Asus	Fn+F8	Sharp	Fn+F5
Acer	Fn+F5	Hitachi	Fn+F7
Samsung	Fn+F4	TOSHIBA	Fn+F5
Sony	Fn+F7		

The user of windows 7 or over windows 7. Simply press the **■ +P**, select "copy" to connect. If the operation above is invalid, Please update the computer graphics driver.

NOTE FOR USE: Dolby Sound is Not Supported

Because all projector sellers can't take the copyright of Dolby Sound agreement, all projectors on the market are not compatible with Dolby sound, and you need to turn off Dolby sound when using it. Our products also can't work with Dolby Sound(Amazon fire stick, Netflix, Blue ray movies and so on).

When the projector is connected to the fire stick, the video being played comes with Dolby audio.

The projector does not support Dolby audio, so it is sufficient to turn off the Dolby audio, otherwise there is no sound.

In this case, please turn off the Dolby sound on your device or apps.

The indtruction for your reference to turn off the Dolby sound, (Settings > Display & Sounds > Audio > Dolby Digital Output > and then turn Dolby Digital (OFF))

Finally, there is some small tip to get same sound effect:

1.You can connect an external sound box because it runs perfectly as a dolby.

2.Simply connect the hard drive to an android tv box instead of directly to the projector, and using some Addon that allows you to play videos (For example using Kodi with Blue Crystal) and control the audio options.(If you don't have an Android TV box, you can borrow this connection method)

If there are any questions, don't hesitate to contact us.

USB DRIVE CONNECTION

① Different from other devices, when you connect a USB drive via USB 2 Port, the USB mark in the upper right corner of the main menu will turn green. you don't need to click "USB" to select the USB signal source, directly select the file you want to play on the main menu.

② To play a video stored in a USB Drive, select "MOVIE" on the main menu, and press the "OK".

③ To play a picture, music, or text stored in a USB drive, Select "Photo / Music / Text" on the main menu, and press the "OK".

NOTE:

① The chip of this projector is not compatible with files stored in a USB stick in PPT format.

② If you want to play PPT, please store the PPT document on your mobile phone, laptop, then connect this projector to them.


Video Format	3GP/AVI/FLV/MKV/MP4/MPG/WMV/RMVB/RM/TRP/VOB/DIVX/TP/TS/DAT
Audio Format	MP3/AAC/FLAC/OGG/MAV/WAV/WMA/M4A
Photo Format	BMP/JPG/PNG/JPEG

PROJECTOR SETTING

PROJECTION SETTINGS

1. Click "Setting" of the projector menu.


2. "PICTURE" / "SOUND" / "OPTION" can be set manually. After you select the properties (PICTURE/SOUND/OPTION) you want to set, please press arrow keys on the operation panel to select the setting range of the properties.

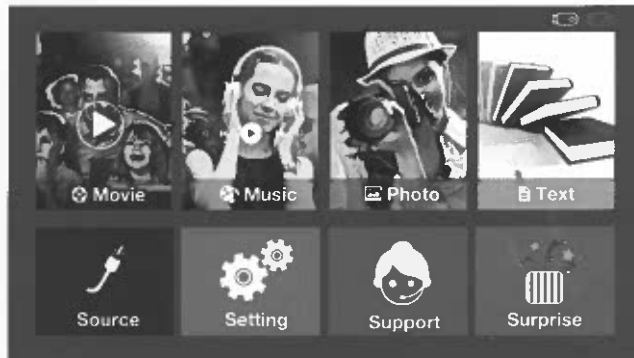

PROJECTOR SETTING

OPTIONS RELATED TO "PICTURE" ARE SET ON THIS SCREEN

- Picture Mode: "Standard", "Brief Report", "User", "Video" and other image modes are default to fit a variety of projection.
- Color Temperature: "Standard", "Cool", "User" and "Warm" and other multiple color temperature modes are default for different color preferences.
- Noise Reduction: Set the noise reduction strength.

PICTURE 	Picture Mode	Standard
	Contrast	50
	Brightness	50
	Color	50
	Tint	50
	Sharpness	50
	Focus	0
	Color Temperature	Medium
	Noise Reduction	Middle

14

PROJECTOR SETTING

OPTIONS RELATED TO "SOUND" ARE SET ON THIS SCREEN

- Sound Mode: "Standard", "Movie", "Sports", "User" modes are default.


SOUND 	Sound Mode	Standard
	Treble	50
	Bass	50

15

PROJECTOR SETTING

OPTIONS RELATED TO "OPTION" ARE SET ON THIS SCREEN

 - **OSD Language:** Set the language in the system with English as default.
- **Aspect Ratio:** Set the length to width ratio of the picture. Included "Auto", "4:3", "16:9".
- **Projection Mode:** "Preposition", "Postposition", "Hanging Preposition", "Hanging Postposition" and other modes are the default for different installation modes.
- **Factory Default:** Restore the factory default setting.

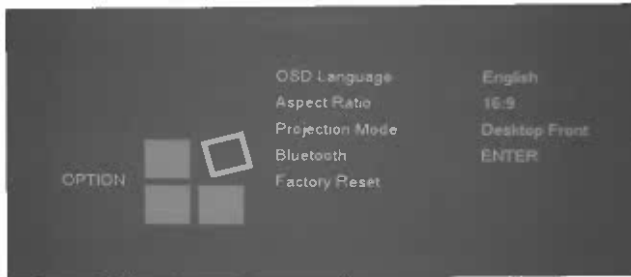

16

TROUBLESHOOTING GUIDE

- 1. Blurry Image**
 - Adjust focus ring/keystone.
 - Projector and screen/wall must be in effective distance.
- 2. Remote Unresponsive**
 - Make sure remote points at IR receiver directly.
 - Do not cover IR receiver.
 - Try a new pair of AAA batteries
- 3. Upside Down Images**
 - Go to Menu>PICTURE>Projection mode to flip the projection image
- 4. Auto On/Off**
 - Go to Menu>TIME>Auto On/Auto Off and set the time to automatically turn on/off the projector
 - Go to Menu>TIME>Sleep Timer to adjust the time period before the projector automatically turns off.
- 5. Factory Reset**
 - Go to Menu>OPTION>Factory Reset to restore factory settings as needed.
- 6. Language Settings**
 - Go to Menu>OPTION>OSD Language to select the language
- 7. Dolby Sound**
 - Turn off the Dolby sound on your device or apps: Settings > Display & Sounds > Audio > Dolby Digital Output > turn Dolby Digital OFF
- 8. About Compatible Office Suite (PPT, EXCEL, Word)**
 - If you want to play Office Suite, please store the PPT/EXCEL/Word document on your mobile phone/ laptop /PC, then connect with projector to play them.

17